



# Mono Point Fixed Stem Suspension Assembly Instructions

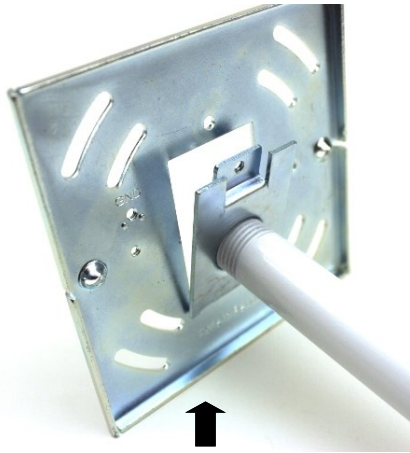

Insert Tail end, then shift tapped side on inside of crossbar and fasten with 8/32" screw

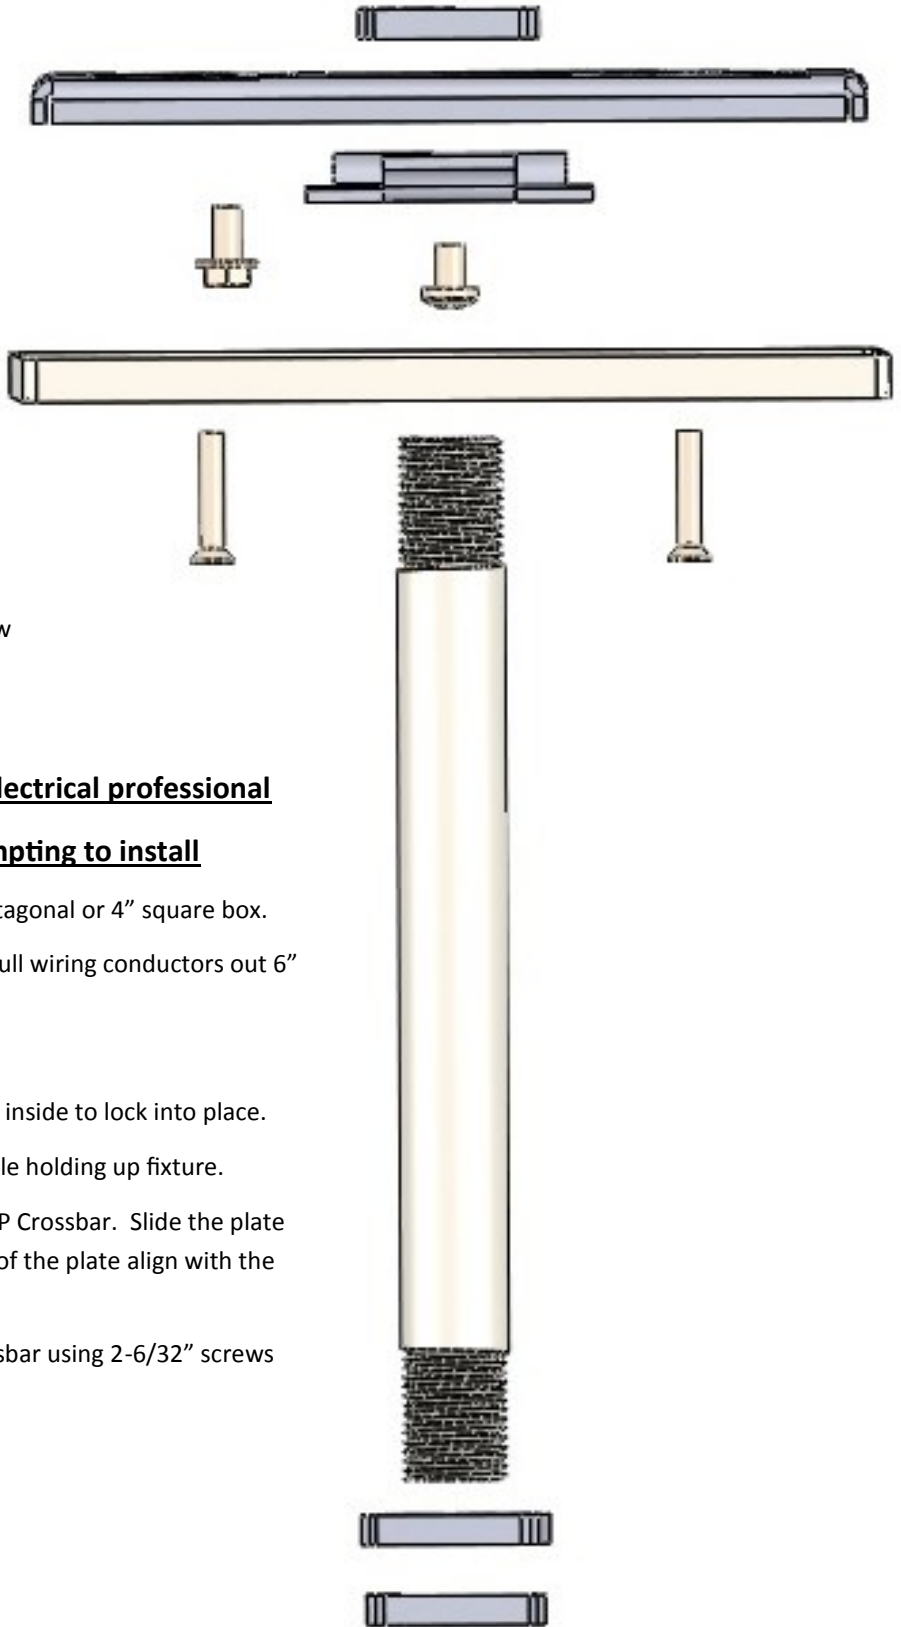

## Warning Electrical Shock Hazard:

All wiring should be done by a qualified electrical professional

Disconnect all power sources before attempting to install

- 1) Mount Mono Point Crossbar as shown to 4" octagonal or 4" square box.
- 2) Assemble stem into fixture with locknuts and pull wiring conductors out 6" longer than stem.
- 3) Insert canopy over stem.
- 4) Thread MP-Plate onto stem and use locknut on inside to lock into place.
- 5) Make electrical connections and grounding while holding up fixture.
- 6) Hinge MP-Plate as shown above on inside of MP Crossbar. Slide the plate in so the tapped screw holes on the other side of the plate align with the crossbar. Fasten in place with 8/32" screw.
- 7) Push canopy to junction box and fasten to crossbar using 2-6/32" screws

**Assembly is rated for 50 lbs. Static Loads Only (No dynamic or moving loads)**

**Not for chemical or pool corrosive environments**

**Mono Point Patent Pending Pendant Systems Mfg. 5/2013**